

Lubrication points are shown below. The Lubrication Chart (See Section 5-5) gives type of lubricant and frequency.

