

RIGGING AND HANDLING INSTRUCTIONS


Unit has either four or six lifting points. (Six point shown below).

CAUTION: ALL LIFTING POINTS MUST BE USED.

Note: Rigging cables must be at least as long as distance "A."

SPREADER BARS
REQUIRED

CAUTION: Lifting points may not be symmetrical to center of gravity of unit. Ballast or unequal cable lengths may be required.

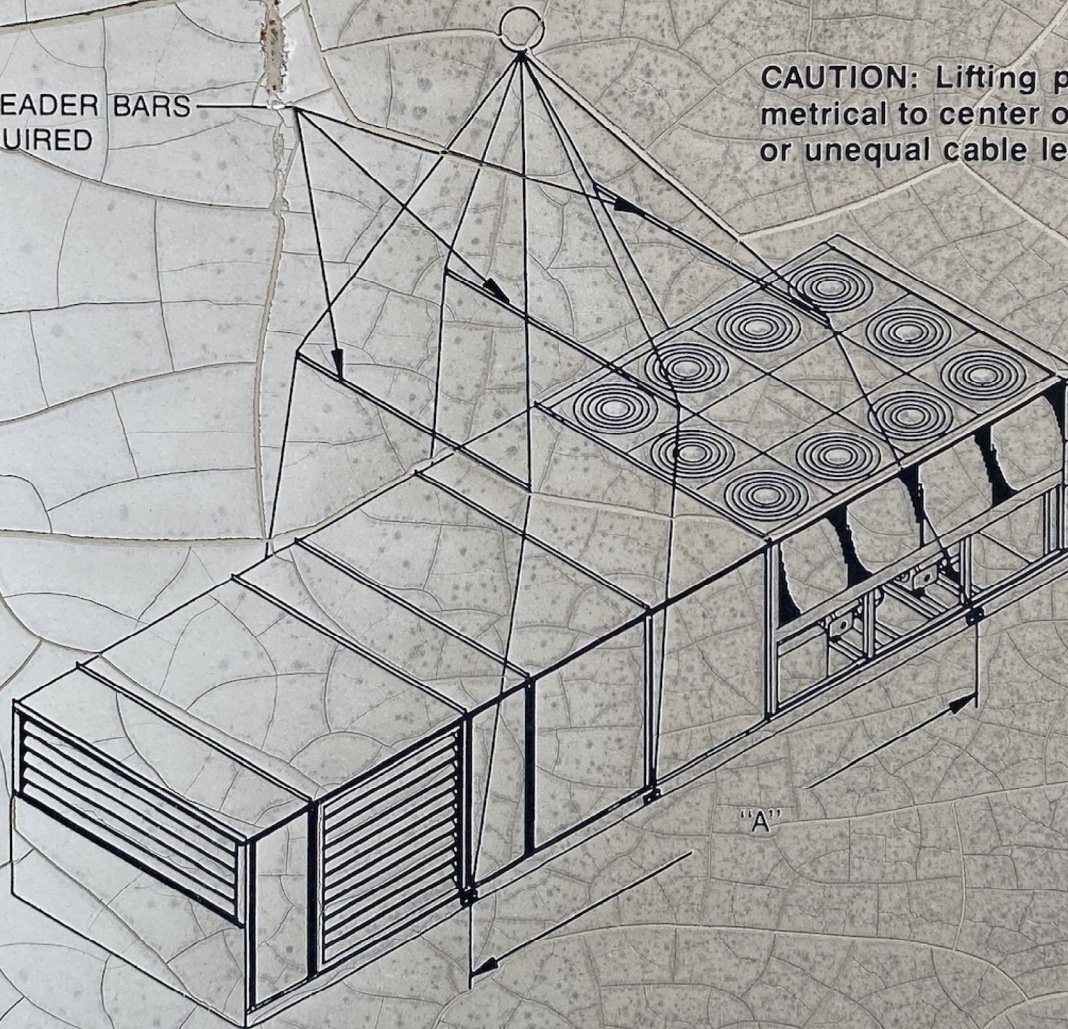

LIFT ONLY AS INDICATED